



# READ ME FIRST PCI ATM NT ID2.0 DRIVER

---

Read This Before You Begin!

---

## Purpose

This readme file provides new features and any known issues related to SVC SX00168-D01 NT PCI ATM DRIVERS.

## Description

Release Notes

-----

- 1) If you have any previous version of NT ATM PCI driver installed on your machine, you will need to remove that driver and reinstall sx00168-D01.
- 2) This version corrects an MPOA connection problem where the connection will break down after 1 second. This only occurs if the MPOA server is running version 1.0 of the MPOA specification.
- 3) This version corrects an issue with a LEC not recovering from a cable pull.
- 4) This version corrects the occurrence of intermittent crc errors and lost connections.

Installation and System Requirements

-----

- 1) Please refer to the 5575 Users Guide available on the Interphase Web site.

Known Issues:

-----

- 1) Repeated roll over on redundant link feature may cause a lock up  
Currently, this is under investigation.
- 2) When executing a clean install the file add.exe fails to get copied in before the prompt for snmp support. If snmp is required a second install is necessary.
- 3) When configuring Cellview the adapter must have a good physical link, otherwise a lockup may occur.
- 4) Event log entries are not accessible. If an attempt to open an event log entry is made an Application error log is being generated, eventvwr.exe exception access violation (0xc0000005),address: 0x77f87264.

## Contact Information

### Customer Service

**United States:** Telephone: (214) 654-5555  
Fax: (214) 654-5500  
E-Mail: [intouch@iphase.com](mailto:intouch@iphase.com)

**Europe:** Telephone: + 33 (0) 1 41 15 44 00  
Fax: + 33 (0) 1 41 15 12 13

### World Wide Web

<http://www.ipphase.com>

### Anonymous FTP Server

<ftp.ipphase.com>