



READ ME FIRST PCI ATM NT ID2.0 DRIVER

Read This Before You Begin!

Purpose

This readme file provides new features and any known issues related to SVC SX00168-D02 NT PCI ATM DRIVERS.

Description

Release Notes

- 1) If you have any previous version of NT ATM PCI driver installed on your machine, you will need to remove that driver and reinstall sx00168-D02. You may also simply unzip the package and copy ip5515si.sys and asig.sys over the existing ones in \winnt\system32\drivers and reboot.
- 2) This version corrects the problem of accessing eventlog entries. The previous version would cause an application error when opening an eventlog entry from either asig or ip5515si.
- 3) This version corrects a problem with LANE Flush Frames on V2 networks. The Lan-Target-Destination field of the frame was not filled in as required when not sending on a data direct VC. It is now filled in with the appropriate MAC address and type field.

Installation and System Requirements

- 1) Please refer to the 5575 Users Guide available on the Interphase Web site.

Known Issues:

- 1) Repeated roll over on redundant link feature may cause a lock up
Currently, this is under investigation.
- 2) When executing a clean install the file add.exe fails to get copied in before the prompt for snmp support. If snmp is required a second install is necessary.
- 3) When configuring Cellview the adapter must have a good physical link, otherwise a lockup may occur.

Contact Information

Customer Service

United States: Telephone: (214) 654-5555
Fax: (214) 654-5500
E-Mail: intouch@iphase.com

Europe: Telephone: + 33 (0) 1 41 15 44 00
Fax: + 33 (0) 1 41 15 12 13

World Wide Web

<http://www.ipphase.com>

Anonymous FTP Server

<ftp.ipphase.com>