

Interphase (i) Corporation
READ ME FIRST
UGR0238-000-A
554E Solaris Fast Ethernet Driver

Read This Before You Begin

DESCRIPTION

This is the README file for the Interphase 554E Solaris Fast Ethernet driver.

This software supports both 32 bit and 64 bit sparc systems running Solaris operating system versions 2.6, 7, and 8.

BEFORE YOU START

If an Interphase Ethernet driver is already installed on your system, it should be removed before the new driver is installed.

INSTALLATION

1. To install the Ethernet adapters in a system, follow the steps below.

- a. Login as root.
- b. Shut down the system and power off the system.
- c. Install one or more Ethernet adapters in the system.
- d. Connect each adapter to a port on an Ethernet switch. The green link LED on the front panel of the adapter will be on if the adapter is connected to the switch properly and the system is powered up.
- e. Power on and boot the system.

2. Solaris package installation.

- a. Login as root.
- b. Change to the directory that contains the Solaris driver package.
- c. To install the package, type:

```
pkgadd -d ./<pkg_file>
```

where <pkg_file> is the package file.

d. Reboot the system.

OUTSTANDING ISSUES

1. Statistics using the 'netstat' command are not supported. Users may obtain statistics using the 'kstat' command.

CONTACT INFORMATION

Customer Service:

United States: Telephone: (214) 654-5555
Fax: (214) 654-5500
E-Mail: intouch@iphase.com

Europe: Telephone: + 33 (0) 1 41 15 44 00
Fax: + 33 (0) 1 41 15 12 13

World Wide Web: <http://www.iphase.com>

Anonymous FTP: [ftp.iphase.com](ftp://ftp.iphase.com)