



READ ME FIRST

554E/551E Solaris Fast Ethernet Driver

Read This Before You Begin!

Description

This is the README file for the Interphase 554E/551E Solaris Fast Ethernet driver. This software supports both 32 bit and 64 bit sparc systems running Solaris operating system versions 2.6, 7, and 8.

Before You Start

If an Interphase Ethernet driver is already installed on your system, it should be removed before the new driver is installed.

Installation

To install the Ethernet adapter in a system, follow the steps below.

- Login as root.
- Shut down and power off the system.
- Install one or more Ethernet adapters in the system.
- Connect each adapter to a port on an Ethernet switch. The green link LED on the front panel of the adapter will be on if the adapter is connected to the switch properly and the system is powered up.
- Power on and boot the system.

Solaris package installation.

- Login as root.
- Change to the directory that contains the Solaris driver package.

- To install the package, type:
pkgadd -d ./<pkg_file>
where <pkg_file> is the package file.
- Reboot the system.

Outstanding Issues

Contact Information

Customer Support

United States: Telephone: (214) 654-5555
 Fax: (214) 654-5500
 E-Mail: intouch@iphase.com

Europe: Telephone: 33 (0)1 41 15 44 00
 Fax: 33 (0)1 41 15 12 13

World Wide Web

<http://www.ipphase.com>

Anonymous FTP Server

<ftp.ipphase.com>