

Interphase (i) Corporation
README ME FIRST

Read This Before You Begin

DESCRIPTION

This is the README file for the Interphase 5511 Solaris PCI FDDI driver.

The features and limitations of this driver are as follows:

- Supports 32 and 64 bit
- SAS and DAS support
- SMT 7.3

Note: This driver does not have the capability to burn flash memory.

BEFORE YOU START

INSTALLATION

1. Installing the adapters in a system

To install the Solaris adapters in a system, follow the steps below:

- a. Login as root.
- b. Shut down the system and power off the system.
- c. Install one or more FDDI adapters in the system.
- d. Connect each adapter to the network. The green 'Link' LED on the front panel of the adapter will be on if the adapter is connected to the network properly when the system is powered up.
- e. Power on and boot the system.

2. Solaris package installation

Follow the steps below to install the Solaris package and configure the system.

- a. Login as root.
- b. Go the directory that contains the Solaris driver package.

c. To install the package, type:

```
pkgadd -d ./<pkg_file>
```

Where <pkg_file> is the package file.

d. Reboot the system.

OUTSTANDING ISSUES

CONTACT INFORMATION

Customer Service:

United States:	Telephone:	(214) 654-5555
	Fax:	(214) 654-5500
	E-Mail:	intouch@iphase.com

Europe:	Telephone:	+ 33 (0) 1 41 15 44 00
	Fax:	+ 33 (0) 1 41 15 12 13

World Wide Web: <http://www.ipphase.com>

Anonymous FTP: <ftp.ipphase.com>